


Fig 5

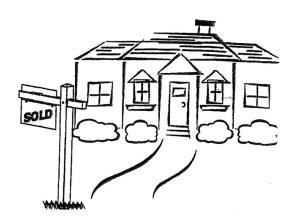

- 1. Hammer in ground anchor at least 13" into the ground. Fig 1
- 2. Slide post over anchor. Fig 2
- 3. Insert the crossarm. Fig 3
- 4. Secure the crossarm in place using included hardware (round base, screw and screw cover). Fig 4
 - -- Insert both end caps into crossarm.
- Take the sign holder (included with hardware), peel the protective sheet off to expose bonding tape and place it on top of crossarm, insert sign in slot and tighten thumb screw.

 Fig 5

For easy cleaning, use clean white cloth and mild spray cleaner.